Refrigerator Operation Manual

i.Series® and Horizon Series™

Model Group	i.Series	Horizon Series
Blood Bank	iB111 (Version D) iB120, iB125, iB245, iB256 (Version D)	HB111 (Version D) HB120, HB125, HB245, HB256 (Version D)
Laboratory	iLR111 (Version D) iLR120, iLR125, iLR245, iLR256 (Version D)	HLR111 (Version D) HLR120, HLR125, HLR245, HLR256 (Version D)
Pharmacy	iPR111 (Version D) iPR120, iPR125, iPR245, iPR256 (Version D)	HPR111 (Version D) HPR120, HPR125, HPR245, HPR256 (Version D)

HELMER SCIENTIFIC
14400 Bergen Boulevard
Noblesville, IN 46060 USA

PH +1.317.773.9073
FAX +1.317.773.9082
USA and Canada 800.743.5637

CE
0086

360126-D/C

ISO 13485:2003 CERTIFIED

Document History

Revision	Date	CO	Supersession	Revision Description
A	08 APR 2013	6666	n/a	Initial release (as version D, revision A).
B	26 NOV 2013*	8934	B supersedes A	► Removed all references to mechanical Access Control. ► Added references to magnetic Access Control.
C	03 MAR 2015	10317	C supersedes B	► Updated instruction in **Section III**, **Items 9.2** through **9.7.1** to reflect use of monitor and control interface with new Min/Max temperature recording feature. ► Added Document Updates, to Document History page. ► Added Confidential / Proprietary Notice, **Section I**, **Item 1.4** and Disclaimer, **Section I**, **Item 1.5**. ► Moved Maintenance Schedule, i.Series® Components and Horizon Series™ Components to Appendices A, B and C.

* Date submitted for Change Order review. Actual release date may vary.

Document Updates

The document is furnished for information use only, is subject to change without notice and should not be construed as a commitment by Helmer Scientific. Helmer Scientific assumes no responsibility or liability for any errors or inaccuracies that may appear in the informational content contained in this material. For the purpose of clarity, Helmer Scientific considers only the most recent revision of this document to be valid.

Contents

Section I: General Information 4

1 About this Manual 4
- 1.1 Intended Audience 4
- 1.2 Model References 4
- 1.3 Copyright and Trademark 4
- 1.4 Confidential / Proprietary Notices 4
- 1.5 Disclaimer 4

2 Safety 5
- 2.1 Labels 5
- 2.2 Avoiding Injury 5

3 General Recommendations 5
- 3.1 Intended Use 5
- 3.2 General Use 5
- 3.3 Initial Loading 5

4 Operating Standards 6
- 4.1 Electrical Specifications 6
- 4.2 Dimensions 6
  - 4.2.1 Weight 6
  - 4.2.2 Size 7

5 Regulatory Compliance 8

6 Installation 9
- 6.1 Location Requirements 9
  - 6.1.1 Placement 9
- 6.2 Temperature Probes 9
- 6.3 Chart Recorder 10
  - 6.3.1 Install and Change Chart Paper 10

Section II: i.Series® Models 11

7 Operation 11
- 7.1 Initial Start Up 11
- 7.2 Change Refrigerator Temperature Setpoint 11
- 7.3 Set Alarm Parameters 12
- 7.4 Normal Operation 12
- 7.5 Active Alarms 12
- 7.6 Mute and Disable Active Alarms 13
- 7.7 Light Operation 13
- 7.8 Access Control (Optional) 13
  - 7.8.1 Setup 13
  - 7.8.2 Open Refrigerator with Access Control 14

8 i.C³® Icon Reference Guide 14

Section III: Horizon Series™ Models 15

9 Operation 15

9.1 Initial Start Up 15
9.2 Monitor and Control Interface 15
9.3 Display Minimum and Maximum Monitor Temperature Recordings 15
9.4 Change Refrigerator Temperature Setpoint 16
9.5 Table of Parameters 17
9.5.1 Setting Parameter Values 17
9.5.2 Set Temperature Units 17
9.6 Temperature Calibration Offsets 17
9.6.1 Monitor Offset 17
9.6.2 Control Sensor Offset 18
9.6.3 Hysteresis 18
9.7 Temperature Alarm Setpoints 18
9.7.1 Change Temperature Alarm Setpoint 18
9.8 Active Alarms 18
9.9 Mute and Disable Audible Alarms 18
9.10 Light Operation 19
9.11 Access Control (Optional) 19
9.11.1 Setup 19
9.11.2 Add User Code 19
9.11.3 Delete User Code 19
9.11.4 Open Refrigerator with Access Control 19

Appendix A: Maintenance Schedule 20

Appendix B: i.Series® Components 21

Appendix C: Horizon Series™ Components 24

Section I: General Information

1 About this Manual

1.1 Intended Audience

This manual is intended for use by end users of the refrigerator and authorized service technicians.

1.2 Model References

Generic references are used throughout this manual to group models that contain similar features. For example, “125 models” refers to all models of that size (iB125, HB125, iLR125, HLR125, iPR125, HPR125). This manual covers all upright refrigerators, which may be identified singly, by their size, or by their respective “Series.”

1.3 Copyright and Trademark

Helmer®, i.Series®, i.C³®, Horizon Series™, and Rel.i™ are registered trademarks or trademarks of Helmer, Inc. in the United States of America. Copyright © 2015 Helmer, Inc. All other trademarks and registered trademarks are the property of their respective owners.

Helmer, Inc., doing business as (DBA) Helmer Scientific and Helmer.

1.4 Confidential / Proprietary Notices

Use of any portion(s) of this document to copy, translate, disassemble or decompile, or create or attempt to create by reverse engineering or otherwise the information from Helmer Scientific products is expressly prohibited.

1.5 Disclaimer

This manual is intended as a guide to provide the operator with necessary instructions on the proper use and maintenance of certain Helmer Scientific products.

Any failure to follow the instructions as described could result in impaired product function, injury to the operator or others, or void applicable product warranties. Helmer Scientific accepts no responsibility for liability resulting from improper use or maintenance of its products.

The screenshots and component images appearing in this guide are provided for illustrative purposes only, and may vary slightly from the actual software screens and/or product components.

2 Safety

Includes general safety information for refrigerator operation.

2.1 Labels

Caution: Risk of damage to equipment or danger to operator

Caution: Hot surface

Caution: Shock/electrical hazard

UNLOCK ALL CASTERS BEFORE PUSHING TO PREVENT OVERTURNING
OUVREZ TOUTES LES ROULETTES AVANT LE DEPLACEMENT POUR EMPÊCHER LE RENVERSEMENT
Caution: Unlock all casters

Earth / ground terminal

Protective earth / ground terminal

2.2 Avoiding Injury

- ► Review safety instructions before installing, using, or maintaining the equipment.
- ► Do not open multiple, loaded drawers at the same time.
- ► Do not move a unit whose load exceeds 900 lbs / 408 kg (single-door units) or 1350 lbs / 612 kg (double-door units).
- ► Before moving unit, ensure casters are free of debris.
- ► Never physically restrict any moving component.
- ► Avoid removing electrical service panels and access panels unless so instructed.
- ► Use supplied power cords only.

CAUTION Decontaminate parts prior to sending for service or repair. Contact Helmer or your distributor for decontamination instructions and a Return Authorization Number.

3 General Recommendations

3.1 Intended Use

Helmer refrigerators are intended for the storage of blood products and other medical and scientific products.

3.2 General Use

Allow refrigerator to come to room temperature before switching power on.

During initial startup, high temperature alarm may sound while refrigerator reaches operating temperature.

CAUTION Do not remove the cover from the condensate evaporator tray.

3.3 Initial Loading

Allow the refrigerator to reach room temperature before powering on. Allow chamber temperature to stabilize at the setpoint before storing product.

4 Operating Standards

These units are designed to operate under the following environmental conditions:

- ► Indoor use only
- ► Altitude (maximum): 2000 m
- ► Ambient temperature range: 15 °C to 32 °C
- ► Relative humidity (maximum for ambient temperature): 80% for temperatures up to 31 °C, decreasing linearly to 50% at 40 °C
- ► Temperature control range: 2 °C to 10 °C

4.1 Electrical Specifications

Refer to specification label for voltage and power consumption requirements. Voltage tolerance is ±10%. Power consumption is measured in full load Amperes.

Input Voltage	Model Variety				
	111	120	125	245	256
115 V, 60 Hz	7.0 A	7.5 A	7.5 A	11.5 A	11.5 A
230 V, 50/60 Hz	3.5 A	4.2 A	4.2 A	6.0 A	6.0 A

Circuit breakers are used only on 230 V models. The ratings for 111, 120, and 125 models is 6 A. The rating for 105, 245 and 256 models is 7 A (quantity 2).

The terminals on the remote alarm interface have the following maximum load capacity:

- ► 0.5 A at 125 V (AC): 1 A at 250 V (DC)

CAUTION

- ► The interface on the remote alarm monitoring system is intended for connection to the end user's central alarm system(s) that uses normally-open or normally-closed dry contacts.
- ► If an external power supply exceeding 33 V (RMS) or 70 V (DC) is connected to the remote alarm monitoring system's circuit, the remote alarm will not function properly; may be damaged; or may result in injury to the user.

4.2 Dimensions

4.2.1 Weight

NOTE The weight may vary slightly depending on installed options. Weights provided are for standard configurations as shown.

	Model Variety		
Model Family	**111**	**120/125**	**245/256**
iB	5 drawers	7 drawers	14 drawers
iLR	4 shelves	4 shelves	8 shelves
iPR	1 shelf and 5 roll-out baskets	1 shelf and 6 roll-out baskets	2 shelves and 12 roll-out baskets

	Model Variety				
Model Family	**111**	**120**	**125**	**245**	**256**
iB	352 lbs 160 kg	531 lbs 241 kg	559 lbs 254 kg	836 lbs 380 kg	890 lbs 404 kg
iLR	322 lbs 147 kg	473 lbs 215 kg	484 lbs 220 kg	702 lbs 319 kg	738 lbs 335 kg
iPR	357 lbs 162 kg	525 lbs 239 kg	552 lbs 251 kg	824 lbs 374 kg	876 lbs 398 kg
HB	345 lbs 157 kg	528 lbs 240 kg	556 lbs 253 kg	835 lbs 379 kg	880 lbs 400 kg
HLR	315 lbs 143 kg	470 lbs 214 kg	481 lbs 219 kg	701 lbs 318 kg	728 lbs 331 kg
HPR	350 lbs 159 kg	522 lbs 237 kg	549 lbs 250 kg	823 lbs 374 kg	866 lbs 393 kg

NOTE Maximum load per drawer is 100 lbs (46 kg).

4.2.2 Size

	i.Series			Horizon Series		
Model	**Width**	**Height**	**Depth**	**Width**	**Height**	**Depth**
105	24” 610 mm	34” 864 mm	28.5” 724 mm	24” 610 mm	34” 864 mm	28.5” 724 mm
111	24.25” 616 mm	70.5” 1791 mm	28.25” 718 mm	24.25” 616 mm	70.5” 1791 mm	28.25” 718 mm
120	29.5” 750 mm	79.5” 2020 mm	32.5” 826 mm	29.5” 750 mm	78.75” 2001 mm	32.5” 826 mm
125	29.5” 750 mm	79.5” 2020 mm	38.5” 978 mm	29.5” 750 mm	78.75” 2001 mm	38.5” 978 mm
245	59.25” 1505 mm	79.5” 2020 mm	32.5” 826 mm	59.25” 1505 mm	78.75” 2001 mm	32.5” 826 mm
256	59.25” 1505 mm	79.5” 2020 mm	38.5” 978 mm	59.25” 1505 mm	78.75” 2001 mm	38.5” 978 mm

NOTE Add 0.375” (10 mm) to the width for optional Access Control.

5 Regulatory Compliance

This device complies with the requirements of directive 93/42/EEC concerning Medical Devices, as amended by 2007/47/EC.

Sound level is less than 70 dB(A).

CE
0086

EC REP

Emergo Europe
Molenstraat 15
2513 BH
The Hague, Netherlands

RoHS COMPLIANT

WEEE Compliance

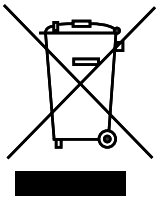

The WEEE (waste electrical and electronic equipment) symbol (right) indicates compliance with European Union Directive WEEE 2002/96/EC and applicable provisions. The directive sets requirements for the labeling and disposal of certain products in affected countries.

When disposing of this product in countries affected by this directive:

- ► Do not dispose of this product as unsorted municipal waste.
- ► Collect this product separately.
- ► Use the collection and return systems available locally.

For more information on the return, recovery, or recycling of this product, contact your local distributor.

6 Installation

6.1 Location Requirements

- ► Has a grounded outlet meeting the electrical requirements listed on the product specification label.
- ► Is clear of direct sunlight, high temperature sources, and heating and air conditioning vents.
- ► Minimum 8“ (203 mm) above, and minimum 3” (76 mm) behind.
- ► Meets limits specified for ambient temperature and relative humidity.

6.1.1 Placement

CAUTION

- ► Do not use the water evaporation tray, located on the rear of the refrigerator, as a handle. The tray may be hot.
- ► To prevent tipping, ensure the casters are unlocked, leveling feet (if installed) are lifted, and the doors are closed before moving the refrigerator.

1. Ensure all casters are unlocked and doors are closed.
2. Roll refrigerator into place and lock casters.
3. Ensure refrigerator is level.

NOTE Helmer recommends the use of leveling feet.

6.2 Temperature Probes

For each probe bottle, use:

- ► 4 oz. (120 mL) of product simulation solution (10:1 ratio of water to glycerin).

6.3 Chart Recorder

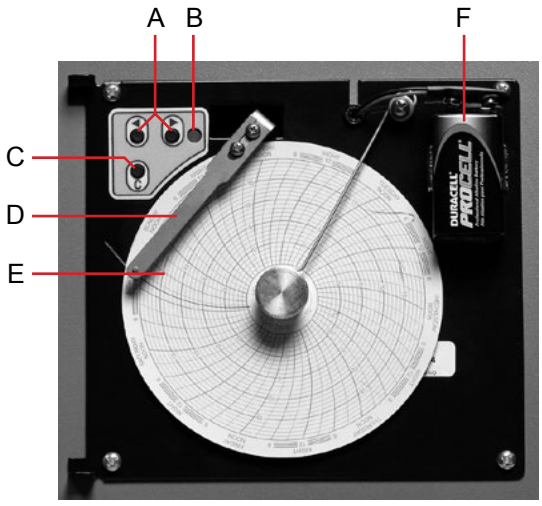

Chart recorder with paper and battery installed.

Label	Description	Function
A	Left and Right Arrow buttons	Adjust settings and stylus position
B	LED	Indicates status of chart recorder in operating mode, or selected temperature range in paper change mode
C	Chart change button	Adjust position of stylus when changing chart paper, or run a test pattern
D	Stylus	Mark temperature line on paper
E	Reset button	Restart chart recorder
F	Backup battery	Provides power during AC power failure. Connect prior to use.

6.3.1 Install and Change Chart Paper

1. Press and hold **C** button. When stylus begins to move left, release button. The LED flashes to indicate current temperature range.
2. When stylus stops moving, remove chart knob then move knob up and away from chart paper.
3. Place new chart paper on chart recorder.
4. Gently lift stylus and rotate paper so current time line corresponds to time line groove.

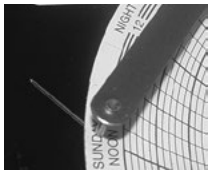

5. Hold chart paper and reinstall chart knob.

NOTE For accurate temperature reading, ensure that current time is aligned with time line groove when chart knob is tightened.

6. Confirm the temperature range is set to the correct value.
7. Press and hold **C** button. When the stylus begins to move right, release the button.
8. Confirm the stylus is marking the temperature correctly.

Section II: i.Series® Models

7 Operation

7.1 Initial Start Up

1 Plug the power cord into a grounded outlet that meets the electrical requirements on the product specification label.
2 Switch AC ON/OFF switch ON.
3 Switch backup battery switch ON.

NOTE
- ► For models equipped with the optional Access Control, the backup battery is switched on with a key switch.
- ► The i.C³ monitoring and control system will take approximately two minutes to boot up.

4 Select language.

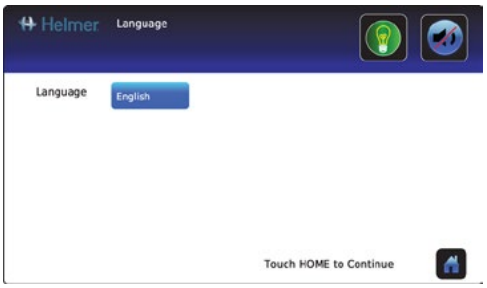

NOTE Active alarms are displayed on the Home screen. If an alarm condition other than High Temperature occurs, refer to the service manual for troubleshooting.

5 If an alarm sounds, temporarily mute the alarm by touching the **Mute** button.

7.2 Change Refrigerator Temperature Setpoint

i.C³ APPS > Touch **+** or **–** on spin box to change value.

NOTE Default setpoint is 4.0°C

7.3 Set Alarm Parameters

> > Alarm Settings	Control the conditions and timing of alarm condition indicators displayed on the i.C³ Home screen. Touch **+** or **–** on spin box to set each parameter.

7.4 Normal Operation

The i.C³ Home screen displays temperature and alarm information, and provides icons for reaching other functions of the i.C³.

Home screen.

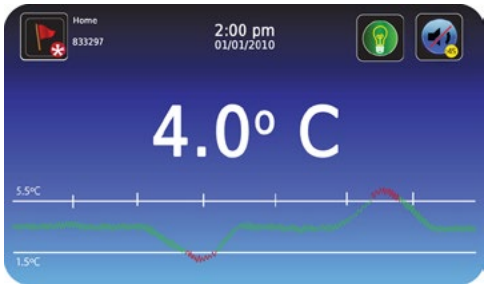

Home screensaver (touch to return to Home screen).

7.5 Active Alarms

Home with no alarms.

Home with active alarm.

Alarm	Description
High Temperature	Chamber temperature reading is above high temperature alarm setpoint
Low Temperature	Chamber temperature reading is below low temperature alarm setpoint
Low Battery	Rechargeable battery voltage is low
Power Failure	Power to unit has been disrupted
Probe Failure	Probe not functioning properly
Door Open	Door is open beyond user-specified duration
Compressor Temperature	Compressor temperature reading is above high temperature alarm setpoint
Communication Failure Messages 1, 2, 3	**1** Communication lost between i.C³ display board and control board **2** Communication lost between i.C³ display board and internal system memory **3** Corrupt database

7.6 Mute and Disable Active Alarms

Audible alarms may be muted by touching the **Mute** button to set delay.

Unmuted *Muted*

7.7 Light Operation

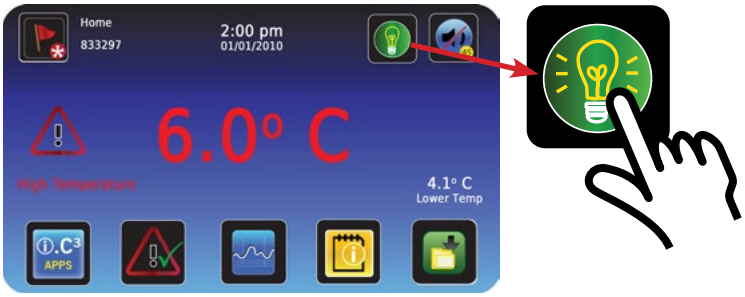

7.8 Access Control (Optional)

Allows user-specific secure access to the refrigerator.

NOTE

- ► During a power failure, the optional Access Control lock will remain locked until battery power is depleted or until the backup battery key switch is switched OFF.
- ► Switching the backup battery key switch OFF will disable the monitoring system.
- ► During a power failure, switch the battery backup switch OFF and use the mechanical door key to provide secure storage for refrigerator contents.

7.8.1 Setup

> > > Access Setup

Configure and manage use-specific accounts to allow controlled access to the refrigerator.

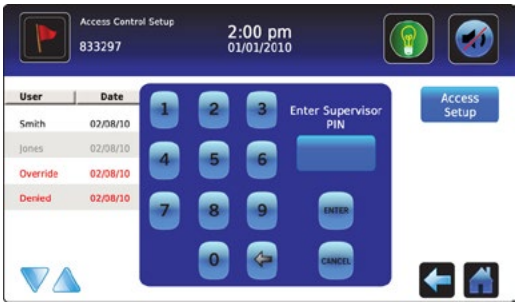

- ► Enter the supervisor PIN to set up Access Control
- ► Initial factory supervisor PIN = 5625

NOTE The supervisor PIN cannot be deleted, and should be changed to prevent unauthorized user ID setup. The supervisor PIN does not allow access to the unit. At least one user ID must be set up to gain access to the unit.

7.8.2 Open Refrigerator with Access Control

► Enter a valid PIN using the keypad.

8 i.C³® Icon Reference Guide

	Home		Mute		Icon Transfer
	Event Log		Download		Display Brightness
	Settings		Upload		Scroll Arrows
	i.C³ Applications		Light On/Off		Access Control
	Back Arrow		Temperature Graph		Access Control Log
	Alarm Conditions		Information Log		Contact Helmer
	Alarm Test		Compressor Log		Battery Power

Section III: Horizon Series™ Models

9 Operation

9.1 Initial Start Up

1 Plug the power cord into a grounded outlet that meets the electrical requirements on the product specification label.

2 Switch AC ON/OFF switch **ON**.

3 Remove the 9 V battery from the literature box and install it.

NOTE

- For models equipped with the optional Access Control feature, switch the backup battery key switch **ON**.
- If an alarm condition other than High Temperature occurs, refer to the service manual for troubleshooting.

4 Press **Down Arrow** (Mute) if high temperature alarm sounds.

9.2 Monitor and Control Interface

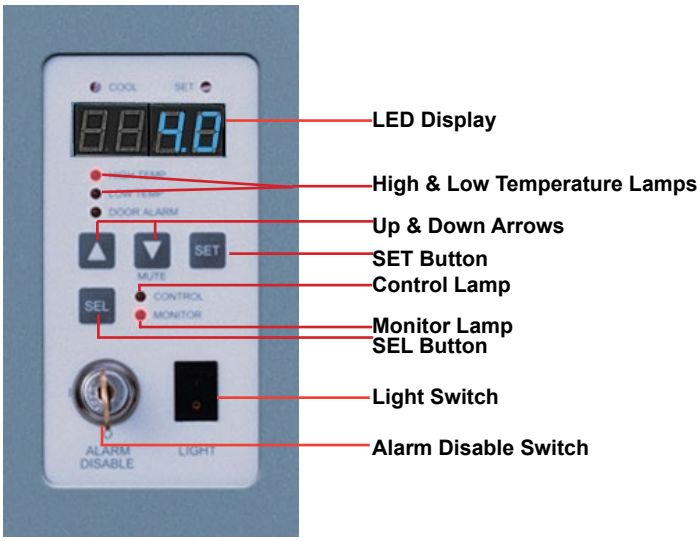

Temperature Monitor and Control Panel

9.3 Display Minimum and Maximum Monitor Temperature Recordings

NOTE

- This feature is standard on Horizon Series™ models with serial numbers of 2015494 or higher. Some exceptions may exist. For confirmation on your unit, please contact Helmer Technical Service.
- Units that do not include the minimum and maximum recording feature will not display .C or .F when entering the program mode.

The minimum and maximum recording feature allows the user to view a minimum temperature occurrence and a maximum temperature occurrence within a given period of time. The timer provides a time reference in which those temperatures occurred.

NOTE The following steps only apply to the Monitor temperature probe.

1 View **minimum** temperature recording.
   - **a** Press and hold the **Down Arrow** button for 1 second and listen for a single beep.
   - **b** The display will alternate between **LO** and a valid temperature value five (5) times followed by a single beep to indicate exit back to the temperature display.

2 View **maximum** temperature recording.
   - **a** Press and hold the **Up Arrow** button for 1 second and listen for a single beep.
   - **b** The display will alternate between **HI** and a valid temperature value five (5) times followed by a single beep to indicate exit back to the temperature display.

3 View recorded temperature timer.

NOTE
- ► The timer denotes the period of time that has elapsed. It does not display the time at which a minimum or maximum temperature occurred.
- ► The maximum period of time the timer can record is 99:59 (99 hours and 59 minutes).

   - **a** Press and hold either the **Up** or **Down Arrow** button for 1 second.
   - **b** While the display is flashing the **HI** or **LO** value, press and hold the **SET** button for 1 second.
   - **c** The display will alternate five (5) times between **CLr** and a value representing the number of hours and minutes that have elapsed since the last recording (example: 12:47 would represent 12 hours and 47 minutes). A single beep will follow to indicate exit back to temperature display.

4 Clear minimum and maximum temperature recordings.
   - **a** Press and hold either the **Up** or **Down Arrow** button for 1 second.
   - **b** While the display is flashing the **HI** or **LO** value, press and hold the **SET** button for 1 second and listen for a single beep.
   - **c** While the display is flashing the elapsed time since last reset, press and hold the **SET** button for 2 seconds. **CLr** will be displayed followed by a series of 3 beeps to indicate exit back to the temperature display.

NOTE The minimum and maximum temperature and timer will reset when:
- ► the unit is powered off and battery backup is not engaged, or
- ► after 99 hours and 59 minutes have elapsed.

9.4 Change Refrigerator Temperature Setpoint

NOTE Default setpoint is 4.0°C

1 Press and release **SEL** to change to Control mode. The CONTROL lamp will illuminate.
2 Press and hold **SET** to display the current setpoint temperature.
3 Hold **SET** and press the **Up** or **Down Arrow** as necessary to set the desired setpoint value.
4 Release all buttons; the setpoint is changed.
5 Press and release **SEL** to return to Monitor mode. The MONITOR lamp will illuminate.

9.5 Table of Parameters

Parameter	Visual Indicator	Range	Default
Celsius or Fahrenheit	None	.C, .F	.C
High Temperature	MONITOR Lamp & HIGH Lamp	-40.0 to 25.0 (°C) -40 to 77 (°F)	5.5°C
Low Temperature	MONITOR Lamp & LOW Lamp	-40.0 to 25.0 (°C) -40 to 77 (°F)	1.5°C (HB); 2.0°C (HLR & HPR)
Monitor Offset	MONITOR Lamp	-10.0 to 10.0 (°C) -18 to 18 (°F)	Varies
Control Offset	CONTROL Lamp	-10.0 to 10.0 (°C) -18 to 18 (°F)	Varies
Hysteresis	CONTROL Lamp	0.5 to 2.5 (°C) 1 to 5 (°F)	2.0°C (HB111) 0.8°C (HLR111 and HPR111) 1.0°C (120, 125) 1.5°C (245, 256)

9.5.1 Setting Parameter Values

1 Press and hold the **Up** and **Down Arrows** simultaneously for 3 seconds to enter program mode.
2 The LED Display will show .C or .F to indicate Celsius or Fahrenheit.
3 Press and release **SEL** button to scroll through the parameters.
4 Once the desired parameter is selected, press and hold the **SET** button while pressing the **Up** or **Down Arrow** to select the desired value.
5 Release **SET** button. The new setting is saved.
6 Press and hold the **Up** and **Down Arrows** simultaneously for 3 seconds to exit program mode.

NOTE Contact Helmer Technical Service for setting Hysteresis values.

9.5.2 Set Temperature Units

NOTE If temperature units are changed, the temperature setpoints, offsets and alarm settings must be recalibrated.

1 Press and hold the **Up** and **Down Arrows** simultaneously for 3 seconds to enter program mode.
2 The LED Display will show .C or .F to indicate Celsius or Fahrenheit.
3 Press and hold the **SET** button while pressing the **Up** or **Down Arrow** to select the desired **temperature unit.**
4 Release **SET** button. The new setting is saved.
5 Press and hold the **Up** and **Down Arrows** simultaneously for 3 seconds to exit program mode.

9.6 Temperature Calibration Offsets

Temperature calibration offsets indicate an acceptable margin of error between the actual temperature value and the desired temperature value.

9.6.1 Monitor Offset

► Adjust if temperature displayed on the monitor is outside a range of ±0.3°C when compared to a calibrated reference thermometer.
► Value is factory-set to match a calibrated reference thermometer.
► Refer to the service manual for instructions regarding changing the Monitor Offset.

9.6.2 Control Sensor Offset

- ► Value is factory-set to match a calibrated reference thermometer.
- ► Adjust if LED Display is not showing the cabinet temperature at the setpoint ±0.3°C.

NOTICE Control Sensor Offset is factory-preset and should not be changed. Contact Helmer Technical Service for instructions regarding changing the Control Sensor Offset.

9.6.3 Hysteresis

- ► Allowable temperature variance above or below the refrigerator setpoint.

NOTICE Hysteresis is factory-preset and should not be changed. Contact Helmer Technical Service for instructions regarding changing the Hysteresis value.

9.7 Temperature Alarm Setpoints

Visual Indicator	Selected Setting
HIGH TEMP and MONITOR lamps	High Temp alarm setpoint
LOW TEMP and MONITOR lamps	Low Temp alarm setpoint

9.7.1 Change Temperature Alarm Setpoint

1. Press and hold the **Up** and **Down Arrows** simultaneously for 3 seconds to enter program mode.
2. The LED Display will show .C or .F to indicate Celsius or Fahrenheit.
3. Press **SEL** until HIGH TEMP or LOW TEMP and MONITOR lamps flash.
4. Hold **SET**, then press **Up** or **Down Arrow** to change the setpoint.
5. Release **SET** button. The new setting is saved.
6. Press and hold **Up** and **Down Arrows** simultaneously for 3 seconds to exit program mode.

9.8 Active Alarms

The controller displays temperature and alarm information.

Visual Indicator	Alarm Cause
DOOR ALARM lamp lights	Door is open (less than 3 minutes)
DOOR ALARM lamp flashes	Door has been open 3 minutes or longer *
HIGH TEMP lamp flashes	Temperature reaches high temperature set point
LOW TEMP lamp flashes	Temperature reaches low temperature set point
“PoFF” appears on display	AC power failure
“Prob” appears on display	Probe circuit is open

* Audible alarm will sound after door is open for 3 minutes.

9.9 Mute and Disable Audible Alarms

- ► Muting audible alarms does not disable alarm lamps or signals sent through the remote alarm interface.
- ► Press **Down Arrow** (Mute) to mute audible alarms.
- ► To disable all audible alarms, insert the key in the Alarm Disable switch and turn.

9.10 Light Operation

The light switch is located on the monitoring and control panel and controls the light within the chamber.

9.11 Access Control (Optional)

Access Control provides user-specific secure access to the refrigerator.

NOTE

- During a power failure, the optional Access Control lock will remain locked until battery power is depleted or until the backup battery key switch is switched OFF.
- During a power failure, switch the battery backup switch OFF and use the mechanical door key to provide secure storage for refrigerator contents.

9.11.1 Setup

The Access Control keypad was programmed at the factory with a master code (0000). The master code is used to program the keypad and enter user codes. The master code also releases the door lock.

NOTE The master code cannot be deleted, and should be changed to prevent unauthorized user code setup.

Enter unique user codes for up to 100 users. Each user code is stored with a specific record location number. Keep a log of the location numbers and user codes with users' names.

9.11.2 Add User Code

- Enter the master code
- Press **1** to initiate user code programming function
- Enter the location number (00 - 99)
- Enter the user code (4 - 9 digit number)
- Press * to save changes and return to normal operation

9.11.3 Delete User Code

- Enter the master code
- Press **1** to initiate user code programming function
- Enter the location number (00 - 99)
- Press * to save changes

9.11.4 Open Refrigerator with Access Control

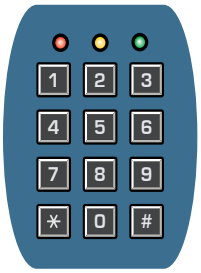

- Enter the user code
- Press #

Appendix A: Maintenance Schedule

Maintenance tasks should be completed according to the following schedule. Refer to the service manual and the i.C³ User Guide for more detail on the various tasks.

NOTE These are recommended minimum requirements. Regulations for your organization or physical conditions at your organization may require maintenance items to be performed more frequently, or only by designated service personnel.

Task	Frequency		
	Quarterly	Annually	As Needed
Test the high and low temperature alarms.			
Test the power failure alarm (as required by your organization's protocols).	✓ (i.Series)		✓ (Horizon Series)
(Models with Access Control) Test the Access Control battery.	✓ (Horizon Series)		
Test the door alarm (as required by your organization's protocols).			✓
Check the temperature calibration on the monitor and change it if necessary.	✓		
(Models with chart recorders) Check the backup battery for the chart recorder after an extended power failure and change it if necessary, or change the battery if it has been in service for one year. Refer to the Temperature Chart Recorder Operation and Service Manual.			✓
Check the level of the solution in the probe bottles. Refill or replace solution if necessary.			✓
Examine the probe bottles and clean or replace if necessary.		✓	
Check the chamber lights and replace them if necessary.			✓
Clean the condenser grill.	✓		
Clean the door gaskets, interior, and exterior of the refrigerator.			✓
If applicable, test the ground fault circuit interrupter on the internal outlet.			✓

NOTE Clean the condenser grill on a quarterly basis.

NOTE

- During a power failure, the backup battery provides power to the monitoring system and the power failure alarm. If the backup battery is not functioning, the power failure alarm will not be activated.
- If the backup battery does not provide power to the monitoring system during the power failure alarm test, replace the battery.
- During a power failure, the backup battery continues to provide power to the optional Access Control lock (if equipped). If the backup battery is not functioning, the optional Access Control lock will not secure the door.
- i.Series: If rechargeable battery has been in service for two years, replace battery.
- Horizon Series: If monitoring system battery has been in service for one year, replace battery. If the optional Access Control battery has been in service for two years, replace battery.

Appendix B: i.Series® Components

Front and Chamber

Chamber and front features (iLR120 model shown).

Label	Description
A	Door lock
B	i.C³ control
C	USB port
D	Upper probe bottle
E	Unit cooler with fan guard
F	Shelf
G	Lower probe bottle (excluding 111 models)
H	Caster
I	Standard for adjusting storage components
J	Drawer/basket slide
Not shown	Chart recorder (standard on blood bank models, optional on laboratory and pharmacy models)

Access Control Option

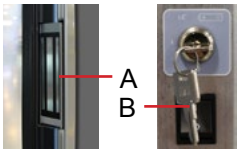

Access Control features (iB120 model shown).

Label	Description
A	Magnetic lock
B	Backup battery key switch

Rear

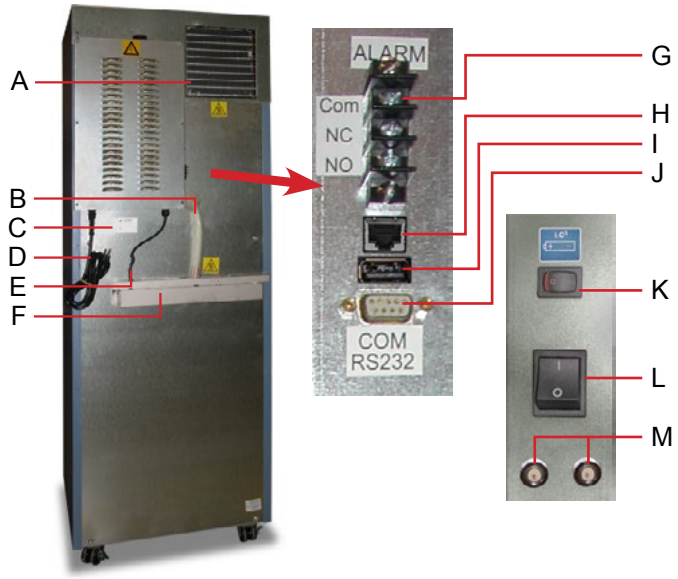

Rear features (iB111 model shown).

Label	Description
A	Condenser grill
B	Drain line
C	Product specification label
D	Power cord
E	Condensate evaporator
F	Water evaporation tray
G	Remote alarm interface
H	RJ-45 Ethernet port
I	USB port
J	RS-232 COM port (optional)
K	Backup battery switch
L	Main power switch
M	Circuit breakers (230 V models)

Top

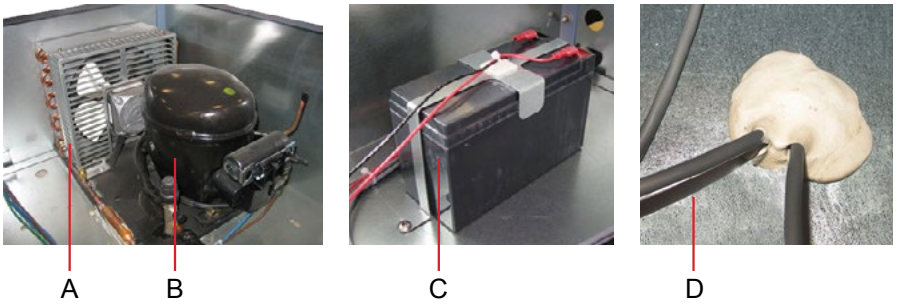

Top features (i.Series model shown).

Label	Description
A	Condenser
B	Compressor
C	Monitor backup battery
D	Access port (number and location vary by model)

Appendix C: Horizon Series™ Components

Front and Chamber

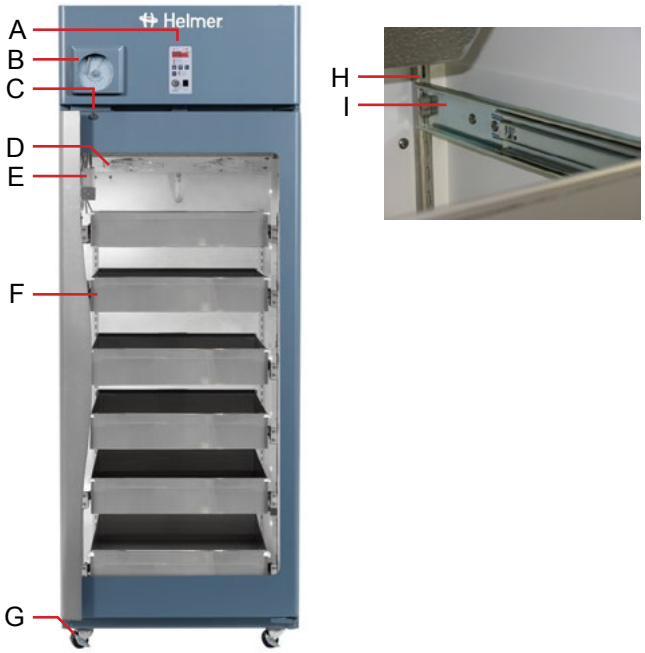

Chamber and front refrigerator features (HB120 model shown).

Label	Description
A	Horizon temperature monitor and control
B	Chart recorder (standard on blood bank models, optional on laboratory and pharmacy models)
C	Door lock
D	Unit cooler (evaporator) with fan guard
E	Upper probe bottle
F	Drawer
G	Caster
H	Standard for adjusting storage components
I	Drawer/basket slide

Access Control Option

Access Control features (HB120 model shown).

Label	Description
A	Keypad
B	Magnetic lock
C	Backup battery key switch
D	Backup battery

Rear

Rear features (HB111 model shown).

Label	Description
A	Condenser grill
B	Drain line
C	Product specification label
D	Power cord
E	Condensate evaporator
F	Water evaporation tray
G	Remote alarm interface
H	Main power switch
I	Circuit breakers (230 V models)

Top

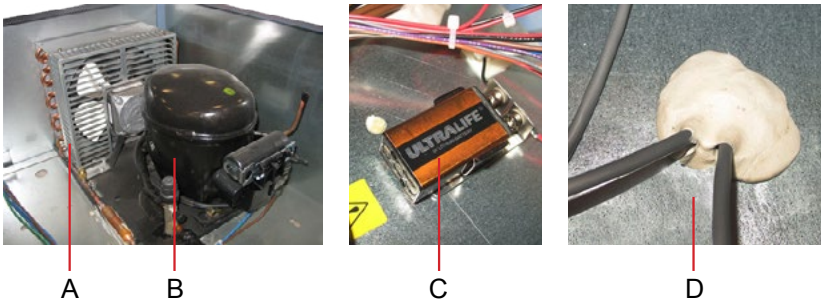

Top features (Horizon Series model shown).

Label	Description
A	Condenser
B	Compressor
C	Backup battery
D	Access port (number and location vary by model)

END OF MANUAL

HELMER SCIENTIFIC
14400 Bergen Boulevard
Noblesville, IN 46060 USA

PH +1.317.773.9073
FAX +1.317.773.9082
www.helmerinc.com

Helmer SCIENTIFIC